

CAST STONE & TEMPERED GLASS BATHROOM FIXTURES



CAS STONE BATHROOM FIXTURE - MOPR SOAP DISH - RECESSED MOUNT

# CAST STONE BATHROOM FIXTURES



CAST STONE BATHROOM FIXTURE IVORY SOAP DISH – RECESSED MOUNT 33-000



CAST STONE BATHROOM FIXTURE IVORY TISSUE HOLDER – RECESSED MOUNT 33-001



CAST STONE BATHROOM FIXTURE IVORY CORNER SHELF – RECESSED MOUNT 33-003



CAST STONE BATHROOM FIXTURE IVORY FLARED CORNER SHELF – RECESSED MOUNT 33-005



CAST STONE BATHROOM FIXTURE IVORY CORNER BENCH – RECESSED MOUNT 33-004



CAST STONE BATHROOM FIXTURE IVORY TOWEL BAR SET – RECESSED MOUNT 33-002

## PACKAGING INFORMATION

DESCRIPTION	ITEM CODE	LBS/BOX	PCS/BOX	BXS/BOX	PCS/SKID
CAST STONE BATHROOM FIXTURE IVORY DISH SOAP – RECESSED MOUNT	33-000	26	8	30	240 pcs.
CAST STONE BATHROOM FIXTURE IVORY TISSUE HOLDER – RECESSED MOUNT	33-001	20	8	32	256 pcs.
CAST STONE BATHROOM FIXTURE IVORY TOWEL BAR SET – RECESSED MOUNT	33-002	28	14	27	378 pcs.
CAST STONE BATHROOM FIXTURE IVORY CORNER SHELF – RECESSED MOUNT	33-003	32.5	10	36	360 pcs.
CAST STONE BATHROOM FIXTURE IVORY CORNER BENCH – RECESSED MOUNT	33-004	17	1	100	100 pcs.
CAST STONE BATHROOM FIXTURE IVORY FLARED CORNER SHELF – RECESSED MOUNT	33-005	54	10	12	120 pcs.

## CAST STONE BATHROOM FIXTURES



CAST STONE BATHROOM FIXTURE NOCE SOAP DISH – RECESSED MOUNT 33-020



CAST STONE BATHROOM FIXTURE NOCE TISSUE HOLDER – RECESSED MOUNT 33-021



CAST STONE BATHROOM FIXTURE NOCE CORNER SHELF – RECESSED MOUNT 33-023



CAST STONE BATHROOM FIXTURE NOCE FLARED CORNER SHELF – RECESSED MOUNT 33-025



CAST STONE BATHROOM FIXTURE NOCE CORNER BENCH – RECESSED MOUNT 33-024



CAST STONE BATHROOM FIXTURE NOCE TOWEL BAR SET – RECESSED MOUNT 33-022

### PACKAGING INFORMATION

DESCRIPTION	ITEM CODE	LBS/BOX	PCS/BOX	BXS/BOX	PCS/SKID
CAST STONE BATHROOM FIXTURE NOCE DISH SOAP – RECESSED MOUNT	33-020	26	8	30	240 pcs.
CAST STONE BATHROOM FIXTURE NOCE TISSUE HOLDER – RECESSED MOUNT	33-021	20	8	32	256 pcs.
CAST STONE BATHROOM FIXTURE NOCE TOWEL BAR SET – RECESSED MOUNT	33-022	28	14	27	378 pcs.
CAST STONE BATHROOM FIXTURE NOCE CORNER SHELF – RECESSED MOUNT	33-023	32.5	10	36	360 pcs.
CAST STONE BATHROOM FIXTURE NOCE CORNER BENCH – RECESSED MOUNT	33-024	17	1	100	100 pcs.
CAST STONE BATHROOM FIXTURE NOCE FLARED CORNER SHELF – RECESSED MOUNT	33-025	54	10	12	120 pcs.

## TEMPERED GLASS BATHROOM FIXTURES



9" x 9" TEMPERED GLASS CORNER SHELF  
- 12mm RECESSED MOUNT 33-048

### CORNER SHELF

#### TEMPERED GLASS – RECESSED MOUNT

1 Piece 9 in x 9 in (23 cm x 23 cm)  
0.47 in / 12 mm thick

#### INSTALLATION

(Recessed Installation, prior to tiling wall or during installation)

1. Determine the height and placement of the corner glass shelving.
2. Tile the wall up to the predetermined location of the shelving.
3. Hold the shelving on the edge of the tile below and determine how much of a groove needs to be cut from the next row of tiles above, to accommodate the height of the shelving. Allow for a 2-3° tilt in the shelf installation to enable better water drainage.
4. Continue tiling the wall leaving the groove required by the shelving.
5. To secure the shelf in place, use construction adhesive to adhere the shelf into the groove, pressing and holding firmly in place until set.
6. Apply 100% silicon caulking (transparent recommended) around the perimeter of the shelf. Use a wet finger to smooth the bead. Clean up any excess caulk with a damp sponge. Any excess adhesive can be removed carefully with a utility knife. Leave to dry over night.

#### PACKAGING INFORMATION

DESCRIPTION	ITEM CODE	LBS/BOX	PCS/BOX	BXS/BOX	PCS/SKID
9" x 9" TEMPERED GLASS CORNER SHELF – 12mm RECESSED MOUNT	33-048	31.58	10	36	360 pcs.

## TEMPERED GLASS BATHROOM FIXTURES



9" x 9" TEMPERED GLASS CORNER SHELF  
- 8mm SURFACE MOUNT WITH HARDWARE 33-049

### CORNER SHELF


#### TEMPERED GLASS – SURFACE MOUNT

1 Piece 9 in x 9 in (23 cm x 23 cm)  
0.31 in / 8 mm thick

#### INSTALLATION

(on existing hard surfaced walls)

1. Check to make sure that all contents are included in the box:
  - (1) Glass shelf
  - (2) Mounting brackets
  - (2) Screws
  - (2) Tube-shaped anchors
2. Mark where you would like the corner glass shelf to be installed.
3. Use a level and draw two leveled lines the same length of the shelf, one line for each side of the wall where the shelf will be installed.
4. Determine the center of each line drawn and drill a hole (using a 1/4-in. carbide glass-and-tile bit). Insert the tube-shaped anchor (if installing on an alternate wall type, be sure to select the appropriate anchor) before using the screws provided to hold the mounting bracket in place. Be careful not to damage or dislodge the spacer on the set screw. Set screw should be oriented on the bottom of the mounting bracket after installation.
5. Slide the glass shelf into the mounting brackets, adjusting the set screw at the bottom to ensure a secure fit.

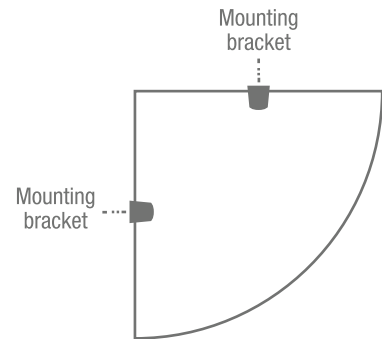

#### PACKAGING INFORMATION

DESCRIPTION	ITEM CODE	LBS/BOX	PCS/BOX	BXS/BOX	PCS/SKID
9" x 9" TEMPERED GLASS CORNER SHELF – 8mm SURFACE MOUNT WITH HARDWARE	33-049	24.58	10	24	240 pcs.